


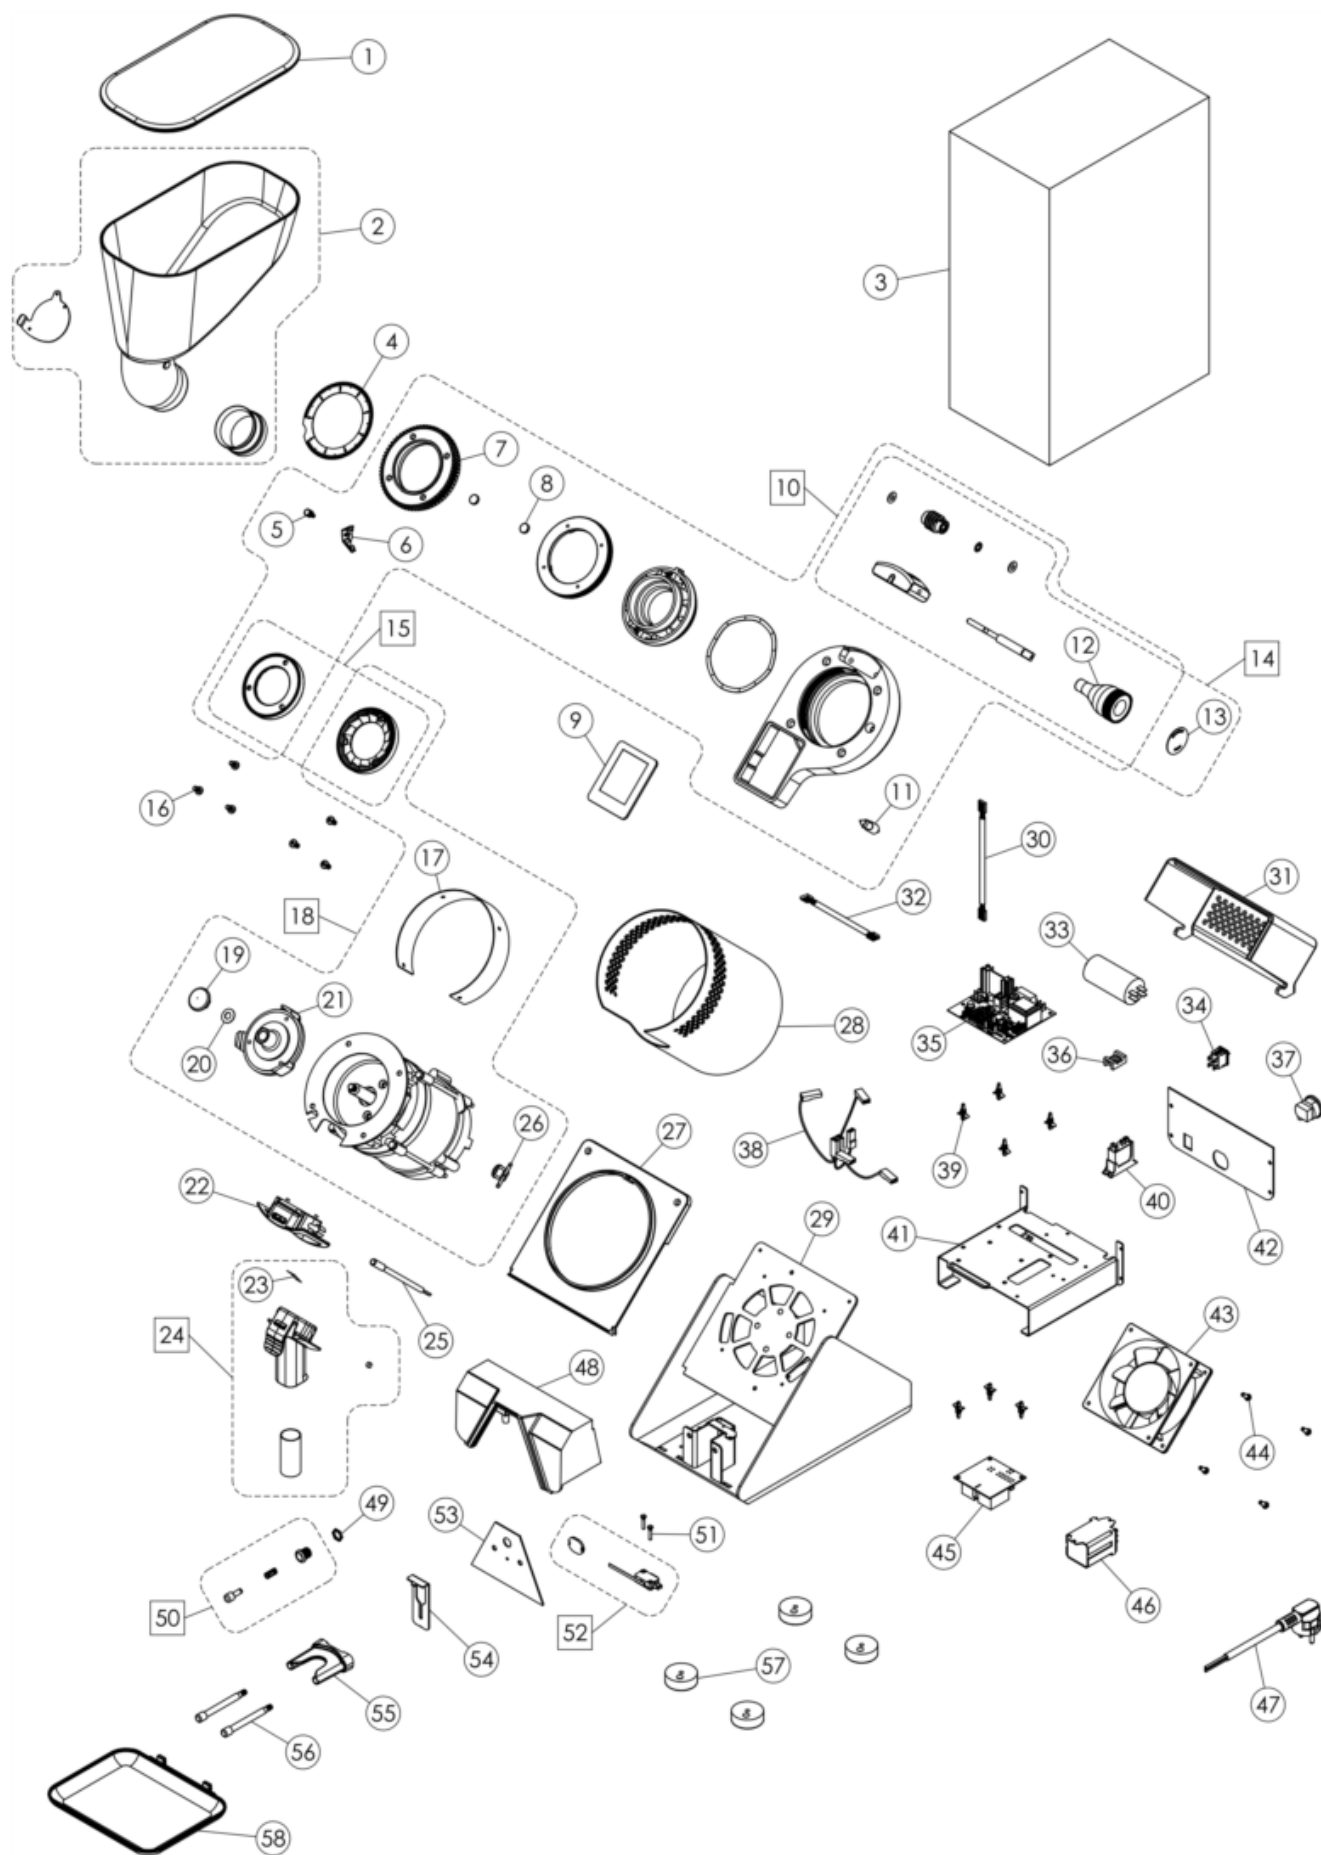

Pos	Code	Description
0001	70265	HOPPER COVER
0002	90391	HOPPER WITH SHUTTER
0003	80119	BOX
0004	85131	SERIGRAPHY
0005	40349	KNOB
0006	70279	SUPPORT
0007	70239	RING
0008	45155	MAGNET
0009	50410	DISPLAY BOARD
0010	90392	HEAD ASSEMBLY
0011	90399	INDICATOR
0012	40339	KNOB GRIP
0013	85130	SERIGRAPHY
0014	90396	QUICK SET GEAR
0015	90411	BURRS
0016	912087	SCREW
0017	20660	MOTOR PROTECTION
0018	90394	MOTOR ASSEMBLY
0019	40319	NUT
0020	746822	WASHER
0021	10471	DRIVE HUB
0022	70275	SPOUT HOLDER
0023	45526	FLAP
0024	90395	SPOUT
0025	50214	REED
0026	50236	THERMOSTAT
0027	70267	COVER
0028	20658	COVER
0029	20654	CASE
0029	20754	CASE
0029	20854	CASE
0030	50275	SERIAL CONNECTOR
0031	70263	COVER
0032	50276	SERIAL CONNECTOR
0033	50426	CAPACITOR
0034	50108	SWITCH
0035	50413	ELECTRONIC BOARD
0036	75164	SUPPORT
0037	50161	CORD CLAMP
0038	50383	WIRING
0039	75146	PIN
0040	50266	RELAY
0041	20459	METAL PLATE
0042	20657	COVER
0043	50492	FAN
0044	75206	PIN
0045	50411	ELECTRONIC BOARD
0046	50154	RELAY
0047	50223	CORD
0048	70262	COVER

Pos	Code	Description
0049	45323	NUT
0050	90180	SWITCH ASSEMBLY
0051	75205	PIN
0052	90457	MICROSWITCH
0053	20656	PLATE
0054	20365	BRACKET
0055	75548	PORTAFILTER SUPPORT COVERING
0056	40246	PIN
0057	70138	FOOT
0058	70335	TRAY